

INSTALLATION INSTRUCTIONS

EASYFLEX®

OSSBJ BRACKET FOR THREADED ROD



REQUIRED SYSTEM PARTS

- Braided Flexible Hose
- OSSBJ Bracket

REQUIRED TOOLS

- Pipe Wrench
- PTFE Tape

⚠ WARNING

- You must read and understand all instructions and warnings before attempting to install any Easyflex sprinkler drops system components.
- Failure to follow these instructions could cause improper operation resulting in serious injury or worse if person or property.
- We recommend wearing safety glasses, a hard hat, and foot protection during installation.

INSTALLATION STEPS


1. Inspect the Easyflex sprinkler drop system components for any sign of physical damage. Make sure all components are included and in the proper order.




2. Disconnect the inlet nipple and outlet reducer from the flexible hose and check that a sealing gasket is in each place properly. Reconnect outlet reducer to the flexible hose.



3. Per the manufacturer's instructions, apply PTFE tape on the inlet nipple thread. Use a pipe wrench to connect inlet nipple to the branch line. Make sure both end threads are clean without any damage.

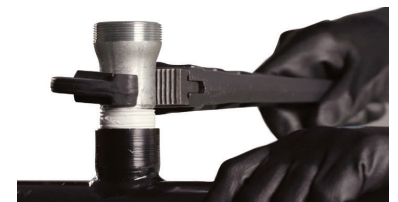

4. Use the pipe wrench to connect the flexible hose to the inlet nipple. Torque range should be a minimum of 50 to a maximum of 58 ft-lbs.

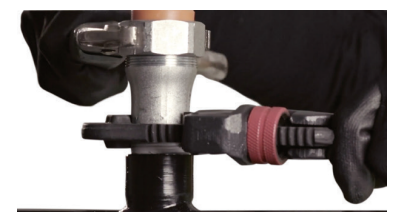

DO NOT use PTFE tape on the inlet nipple thread to connect to the flexible hose.

INSTALLATION INSTRUCTIONS**EASYFLEX****OSSBJ BRACKET FOR THREADED ROD****INSTALLATION STEPS**

5. Thread a K-Lock nut, OSSBJ Bracket, and another K-Lock nut onto the thread rod. Tighten two K-Lock nuts in the opposite direction until the washer bites onto the OSSBJ Bracket to hold the bracket in place on the rod.


⚠ Please follow the proper installation instructions (provided by manufacturer) for all thread rods.




6. Open the OSSBJ Bracket gate and load the flexible hose.



7. Close the gate of the OSSBJ Bracket from left to right.

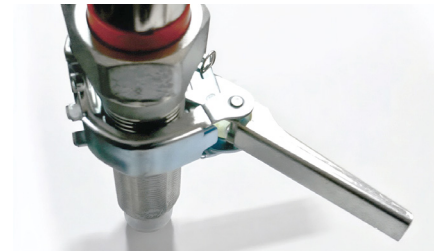

8. Firmly snap in the lever to secure the flexible hose.

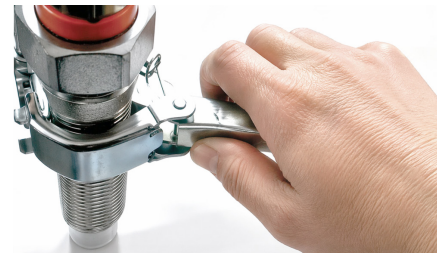

When it's necessary to reposition the flexible drop, follow the steps below to release the center gate.



Locate the ring-shaped wire hook on the bracket (pictured above).



Push the wire hook and grab the lever.



Pull the lever until the gate opens.